5. Troubleshooting

5-1 Convergence Misaligned

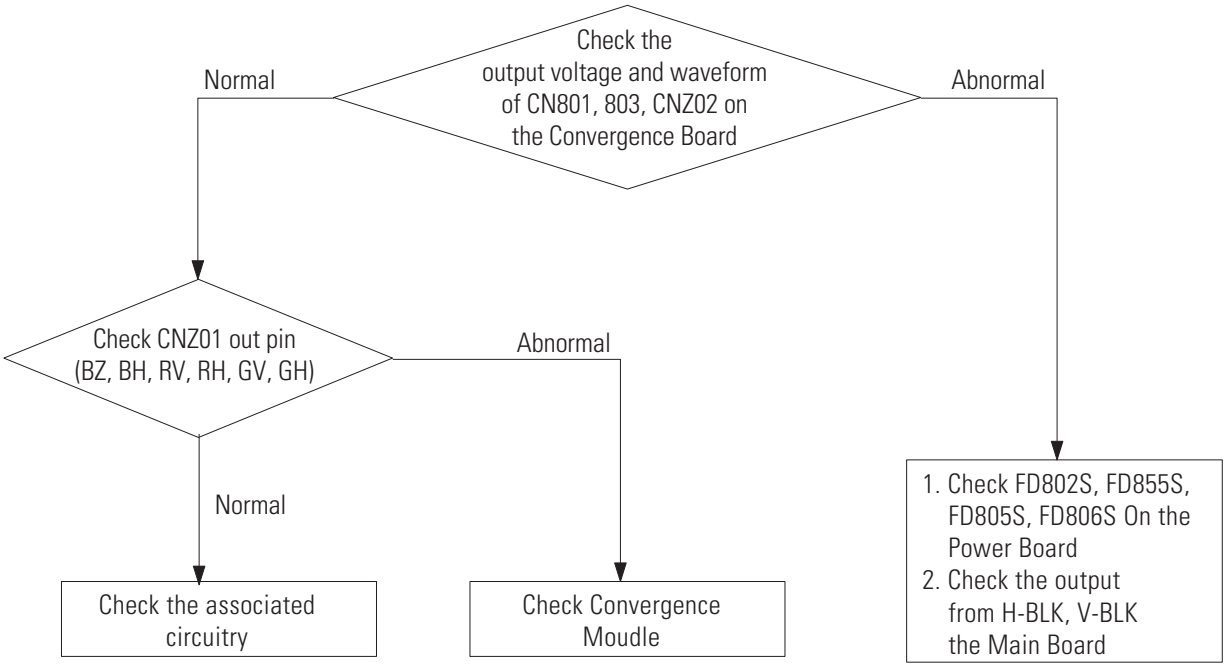

5-2 No Sound

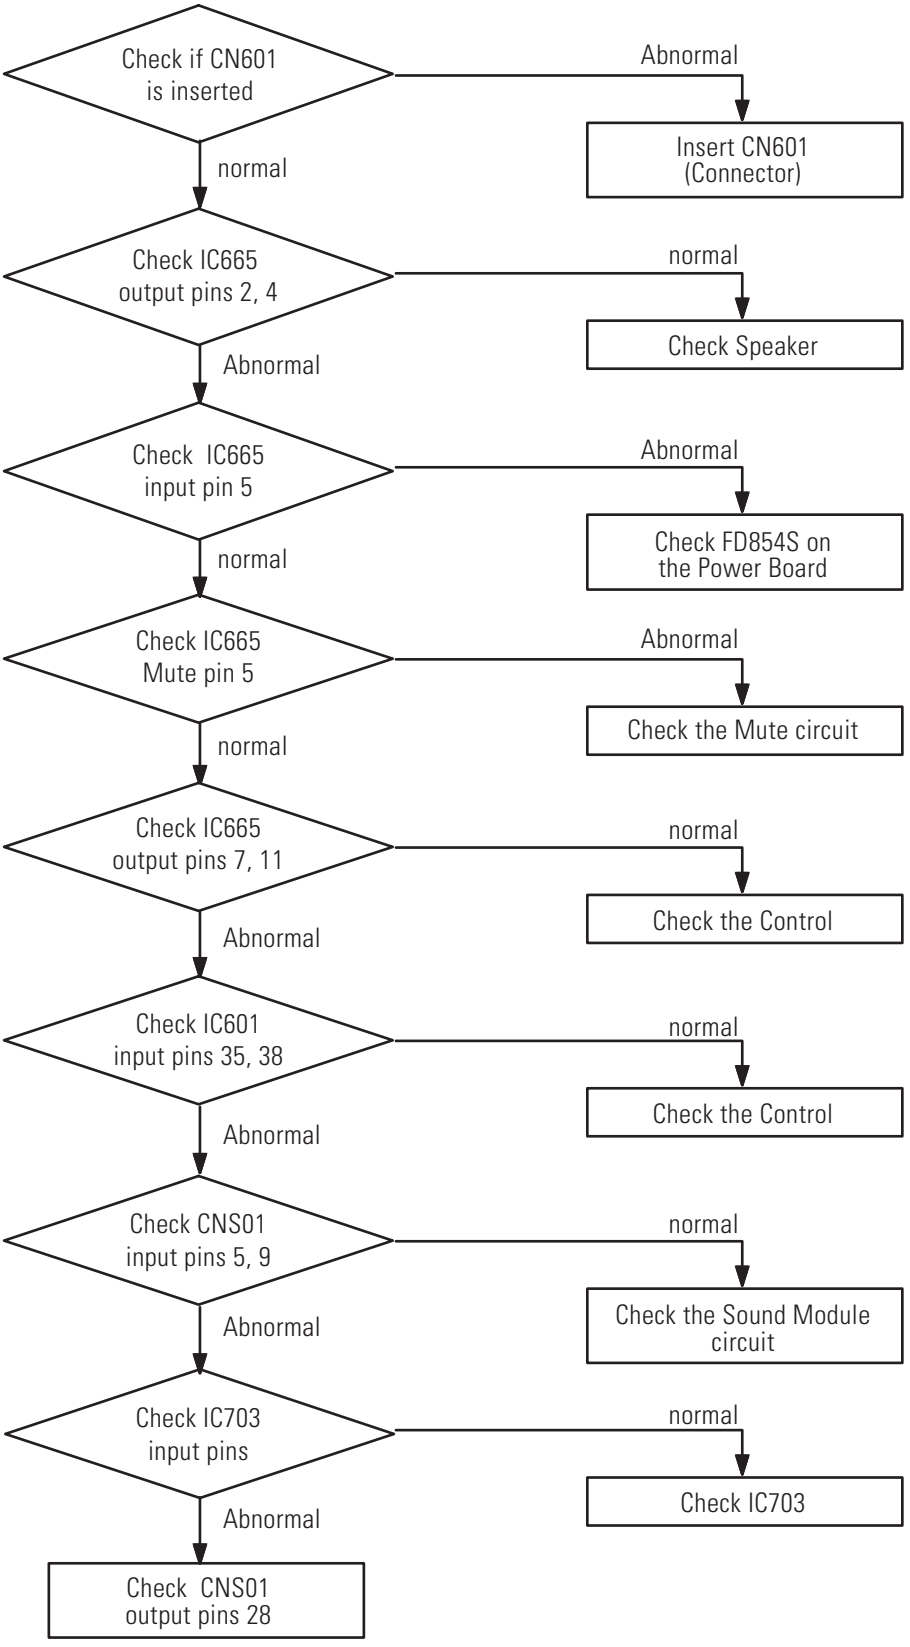
Check if CN601 is inserted
Abnormal
Insert CN601 (Connector)
normal
Check IC665 output pins 2, 4
normal
Check Speaker
Abnormal
Check IC665 input pin 5
Abnormal
Check FD854S on the Power Board
normal
Check IC665 Mute pin 5
Abnormal
Check the Mute circuit
normal
Check IC665 output pins 7, 11
normal
Check the Control
Abnormal
Check IC601 input pins 35, 38
normal
Check the Control
Abnormal
Check CNS01 input pins 5, 9
normal
Check the Sound Module circuit
Abnormal
Check IC703 input pins
normal
Check IC703
Abnormal
Check CNS01 output pins 28

5-3 No Raster (Sound OK)

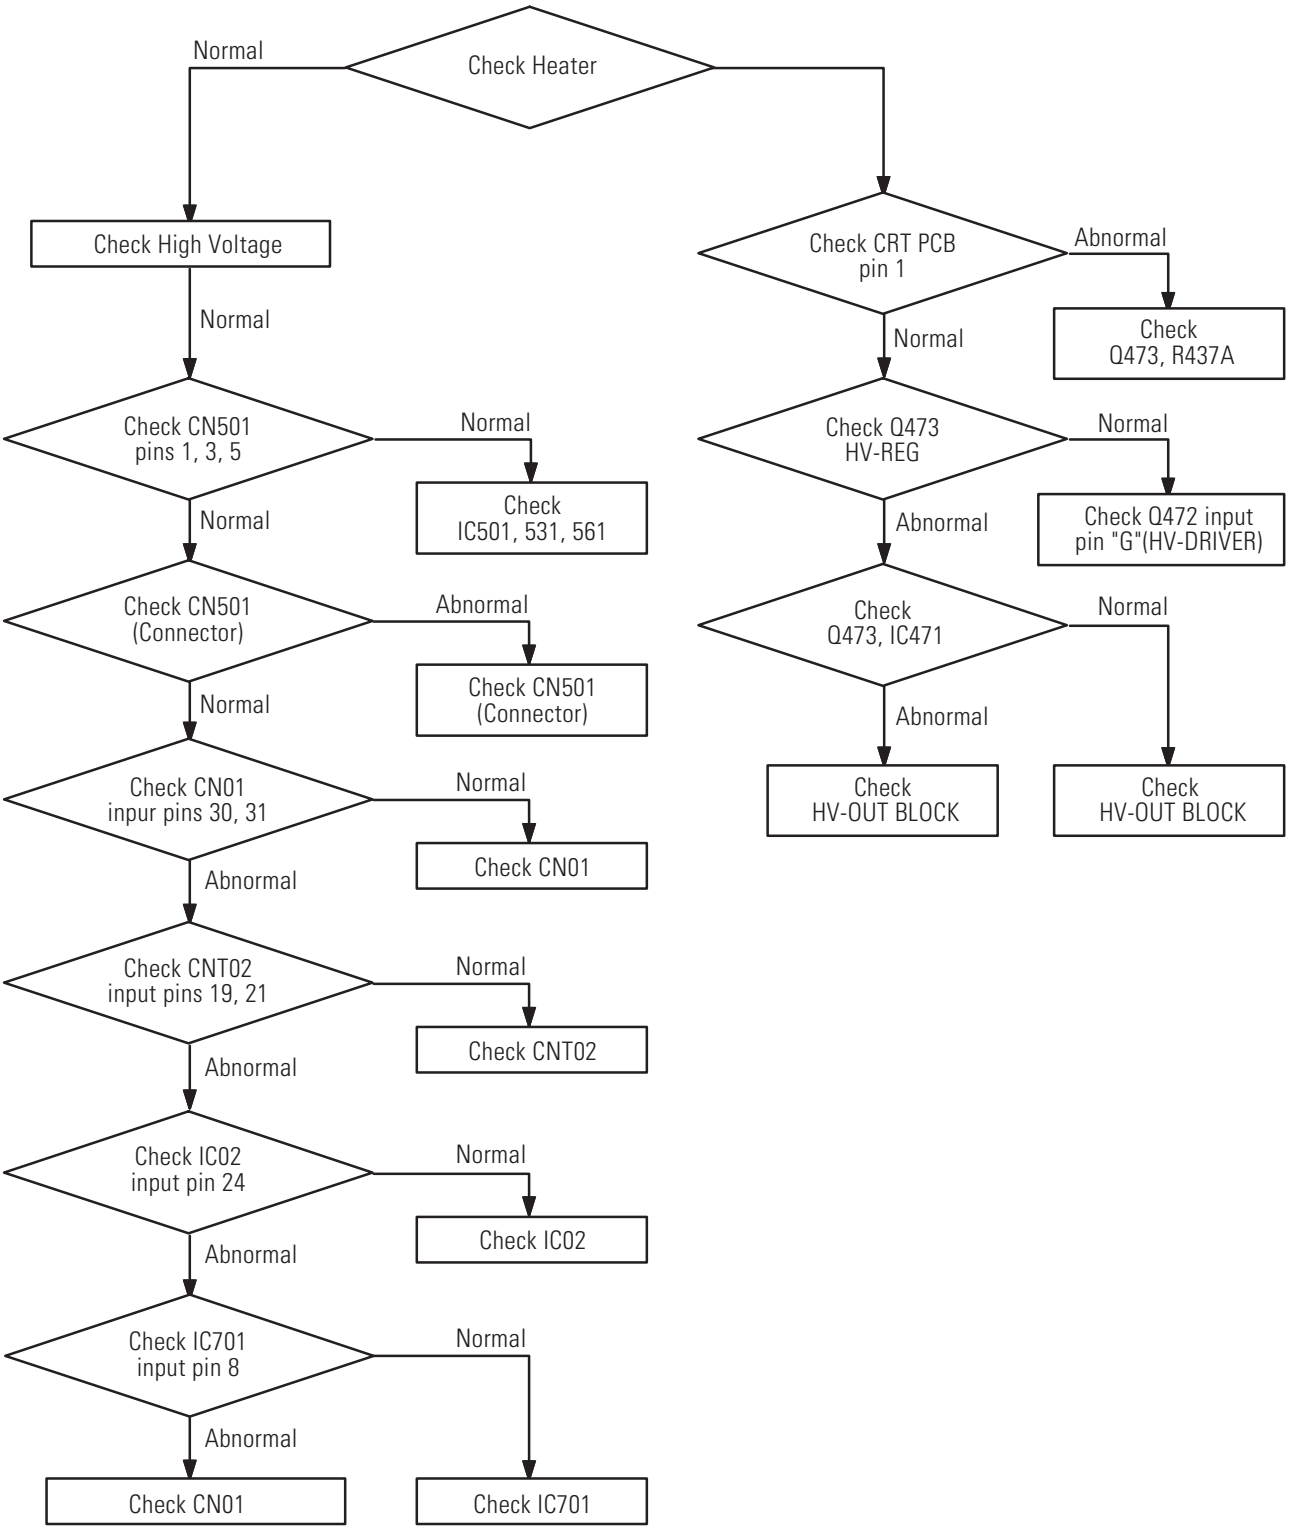

MEMO